

# Spring Replacement (MKIII & MKIII)

03 9776 8801

how to replace a spring in a PowerKut MKIII & MKIII


# 1

- Take secateurs apart so that you have the separated handles as seen in Figure 2.

## CONNECTED HANDLES



## SEPARATED HANDLES

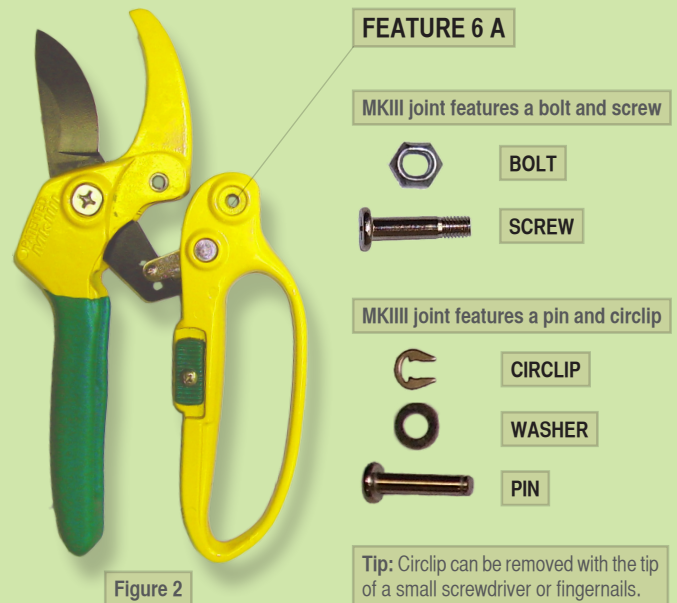

# 2

- Remove faulty spring and replace with replacement spring.

a.

**To remove faulty spring:**

Simply separate handles as far as possible and detach spring from hook at end of blade.

b.

**To insert replacement spring:**

- Separate handles as far as possible.
- Place wider side of spring into hook at end of blade (See Figure 1).
- Place other side of spring into groove under **P BUSH 5783** (See Figure 1).

c.

**To reattach the handles:**

**MKIII**

- Align 6 and 6 A and insert bolt.
- Turn over secateurs and insert screw.
- Use a phillip's head to tighten screw.

**MKIII**

- Align 6 and 6 A and insert pin.
- Turn over secateurs and place washer over pin end.
- Secure circlip over groove in pin end.

**Important:** Make sure that **P BUSH 5783** is inserted into **FEATURE 6**.

Successfully completed repair of an MKIII:

